



クラリネット

取扱説明書

Clarinet

Owner's Manual

Klarinette

Bedienungsanleitung

Clarinette

Mode d'emploi

Clarinete

Manual de instrucciones

单簧管

使用手册

Кларнет

Руководство пользователя

클라리넷

사용설명서

日本語

ENGLISH

DEUTSCH

FRANÇAIS

ESPAÑOL

中文

РУССКИЙ

한국어

ごあいさつ

このたびは、ヤマハクラリネットをお買い上げいただき、まことにありがとうございます。楽器を正しく組み立て性能をフルに発揮させるため、また永く良い状態で楽器をお使いいただくために、この取扱説明書をよくお読みください。

P.3

Congratulations!

You are now the owner of a high quality musical instrument. Thank you for choosing Yamaha. For instructions on the proper assembly of the instrument, and how to keep the instrument in optimum condition for as long as possible, we urge you to read this Owner's Manual thoroughly.

P.13

Wir beglückwünschen Sie!

Sie sind nun der stolze Besitzer eines hochwertigen Musikinstruments. Vielen Dank, dass Sie sich für ein Instrument der Marke Yamaha entschieden haben. Um mit den Handgriffen zum Zusammensetzen und Zerlegen des Instruments vertraut zu werden und dieses über Jahre hinweg in optimalem Zustand halten zu können, raten wir Ihnen, diese Anleitung aufmerksam durchzulesen.

P.23

Félicitations!

Vous êtes dès à présent le propriétaire d'un instrument de musique de haute qualité. Nous vous remercions d'avoir choisi Yamaha. En ce qui concerne les instructions relatives à un assemblage adéquat de l'instrument et sur la façon de garder l'instrument dans des conditions optimales aussi longtemps que possible, nous vous conseillons vivement de lire entièrement le présent Mode d'emploi.

P.33

¡Enhorabuena!

Usted es ahora propietario de un instrumento musical de alta calidad. Le agradecemos su elección de un instrumento Yamaha. Le aconsejamos que lea todo este manual de instrucciones para ver las instrucciones para el montaje correcto del instrumento y para aprender a conservar el instrumento en óptimas condiciones durante tanto tiempo como sea posible.

P.43

致用户！

衷心感谢您选购雅马哈乐器。

为了保证您能够正确组装乐器，并尽可能长时间地将您的乐器保持在最佳状态，我们建议您完整地阅读使用手册。

P.53

Поздравляем!

Теперь Вы владелец высококачественного музыкального инструмента. Благодарим Вас за выбор Yamaha. Для инструкций по сборке и хранению инструмента, при оптимальных условиях, как можно дольше, мы рекомендуем Вам внимательно прочитать Руководство Пользователя.

P.63

인사말

아마하 악기를 구입해 주셔서 감사합니다. 악기의 알맞은 조립 방법 및 보관을 위해 본 사용 설명서를 반드시 읽어주시기 바랍니다.

P.73

Clarinet

Owner's Manual

Precautions

Please read before using

The precautions given below concern the proper and safe use of the instrument, and are to protect you and others from any damage or injuries. Please follow and obey these precautions.

If children are using the instrument, a guardian should clearly explain these precautions to the child and make sure they are fully understood and obeyed. After reading this manual, please keep it in a safe place for future reference.

■ About the Icons

- ⚠ : This icon indicates points which should be paid attention to.
⊘ : This icon indicates actions that are prohibited.

⚠ Caution

Disobeying the points indicated with this mark may lead to damage or injury.

- ⊘ **Do not throw or swing the instrument when others are close by.**
The mouthpiece or other parts may fall off hitting other people. Always treat the instrument gently.
- ⚠ **Keep the oil, polish, etc., out of children's mouths.**
Keep the oil, polish, etc., out of children's reach and do maintenance when children are not present.
- ⚠ **Be careful not to touch the pin springs during maintenance, etc.**
The end of the pin springs found on high-end models is sharpened to provide greater key action.
- ⚠ **Be aware of climatic conditions such as temperature, humidity, etc.**
Keep the instrument away from heat sources such as heaters, etc. Also, do not use or store the instrument in any extreme conditions of temperature or humidity. Doing so may result in damage to key balance, linkage, or pads, resulting in problems during performance.
- ⊘ **Never use benzene or thinner for maintenance on instruments with a lacquer finish.**
Doing so may result in damage to the finish's top coat.
- ⚠ **Take care not to disfigure the instrument.**
Placing the instrument where it is unstable may cause the instrument to fall or drop resulting in disfigurement. Take care as to where and how you place the instrument.
- ⊘ **Do not modify the instrument.**
Besides voiding the warranty, modification of the instrument may make repairs impossible.

 
In regards to brass instruments with a plate finish, the color of the finish may change over time however, it should be of no concern in regards to the instrument's performance. Discoloration in its early stage can easily be removed with maintenance. (As discoloration progresses, it may be difficult to remove.)

* Please use the accessories that are specified for use with the particular type of finish found on the instrument. Also, metal polishes remove a thin layer of the finish's top coat which will make the finish thinner. Please be aware of this before using polish.

Caution—Movable Thumb Rest

● Adjusting the Thumb Rest

1. Loosen the stopper screw and adjust the thumb rest to the desired position.
* Removing the stopper screw can result in losing the screw so only loosen the screw enough to adjust the thumb rest.
2. Secure the thumb rest in place by tightening the stopper screw with a screwdriver or a coin.

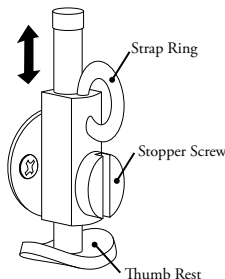

Caution—When Using the Strap Ring

(Only for instruments equipped with a strap ring on the thumb rest.)

- Use with the strap around your neck and the strap's hook inserted through the strap ring.
- When inserting the strap hook into the instrument's strap ring, or while playing, always hold onto the instrument with your hands. Letting the instrument hang from the hook without any support places excessive weight on the ring, which can cause damage. Moreover, if the strap ring were to come off of the hook, the instrument could drop. Please use caution.

Precautions

The wooden clarinet's body is made of natural Grenadilla (other models are made of ABS resin which is extremely weather resistant). For this reason, sudden changes in temperature or humidity may result in cracking of the body or difficulty when connecting the body sections together at the joint. Please take into consideration, the place that the instrument will be used and the manner in which it is used.

- **During the winter season before using it, wait until the entire instrument has adjusted to room temperature.**
- **When the instrument is new, do not use it for long periods of time. Play it for only about 20 to 30 minutes a day for the first two weeks.**
- **Whenever possible, use a cleaning swab to remove moisture or dirt from the instrument.**

The wooden clarinet is a very delicate instrument. Do not use it under the following conditions. Doing so may result in damage to the body.

 
- **Do not expose it to direct sunlight for any extended period of time.**
- **Do not expose it to rain or excessive humidity.**
- **Do not expose it to heat sources such as a stove, heater.**
- **Do not expose it to cool air such as that from an air-conditioner.**

To keep your instrument in optimum condition, please observe the following precautions.


- **After playing it, use a cleaning swab to remove moisture or dirt. (See the "Instrument Maintenance" section on page 19.)**
- **When setting the instrument down for a short period of time, use a cleaning swab to remove moisture and dirt from it, then place it on a stable surface with the keys facing up.**
- **After use, always store the instrument in its case. Do not store it in places of high temperature or humidity.**
- **Never leave a damp gauze or cloth in the case.**
- **When transporting the instrument, make sure that the mouthpiece cap is attached.**

Nomenclature


E♭ Clarinet





B♭/A Clarinet

 

Alto Clarinet

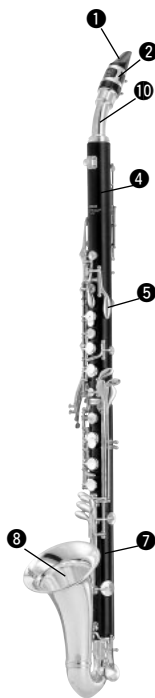 

Bass Clarinet

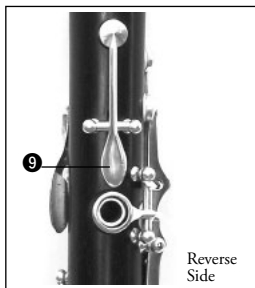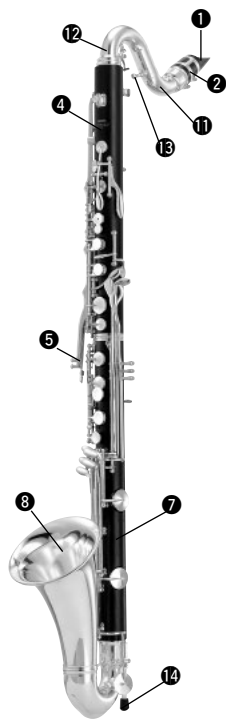  

- 1 Mouthpiece
- 2 Ligature
- 3 Barrel
- 4 Upper Joint
- 5 Key
- 6 Main Body
- 7 Lower Joint

- 8 Bell
- 9 Register Key
- 10 Neck
- 11 Upper Neck
- 12 Lower Neck
- 13 Fastening Screw
- 14 Peg

Accessories

- Mouthpiece Cap
- Cork Grease
- Polishing Cloth

Before assembling the instrument, please observe the following.


The clarinet is made of natural wood and precision metal parts. When holding and assembling the instrument, take care not to place any excessive force on the keys.

Also, if you have difficulty attaching the joints together when assembling the instrument, apply a thin coat of cork grease to the joint cork and try to put the joints together again. When applying cork grease, be careful not to apply too much. If the joints still do not go together smoothly, apply a thin coat of cork grease to the receiver side as well.


■ Assembly

B $\flat$ /A Clarinet


 
1. Attach the barrel to the upper joint and the bell to the lower joint.

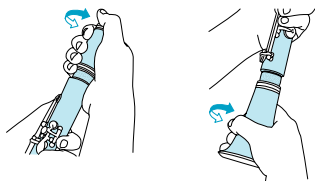

 2. To link the upper and lower joint bridge keys together, hold the upper joint in your left hand as shown in the illustration and press the upper keys to raise the bridge key.

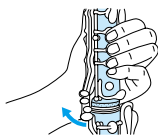


  3. Hold the lower joint in your right hand and check the position of the bridge key. Slide the lower joint onto the upper joint by rotating the lower joint.

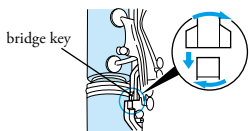


* Make sure the upper and lower bridge keys do not come into contact with each other.

 4. After connecting the upper and lower joints together, attach the mouthpiece.

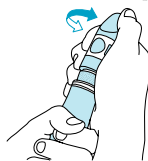

E $\flat$ Clarinet

 1. Attach the barrel and bell to the main body.

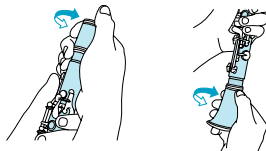


2. Attach the mouthpiece to the barrel.




Alto Clarinet / Bass Clarinet

Caution When Assembling

 As bridge keys protrude from the neck, upper joint, lower joint, and bell on the alto and bass clarinets, be careful not to damage or bend these parts when assembling the instrument. The bell section and tone hole on the alto clarinet is thin so please use extra caution when assembling these parts.

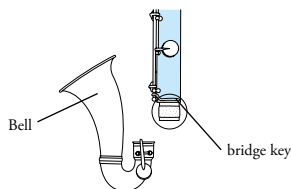


1. Attaching the bell to the lower joint.
Holding the bottom of the bell in your right hand, slide the bell section partially onto the joint.
2. Hold down the pad plate on the bell with your right thumb then slide the bell all the way onto the joint.

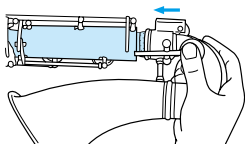 

When assembling the bass clarinet, insert the peg at this point to provide stability when standing the instrument on the floor.

 3. Assemble the upper and lower joints.
While checking the position of the bridge keys, align the upper and lower bridge keys and slide the upper and lower joints together without twisting.

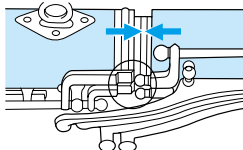


* Make sure the upper and lower bridge keys do not come into contact with each other.

4. Attach the neck to the upper joint.


● On the alto clarinet

 After attaching the mouthpiece to the neck, insert the neck into the upper joint.

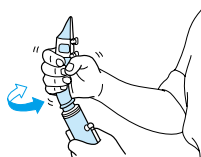


● On the bass clarinet

 Attach the lower and upper neck sections and secure them with the fastening screw. Next, attach the mouthpiece onto the upper neck and then the mouthpiece/neck assembly into the upper joint.

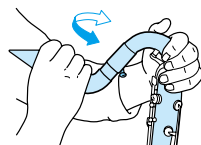


■ Attaching the Reed

 1. Soak the reed in your mouth or in some water. From the tip end of the mouthpiece, slide on the ligature as shown in the illustration.

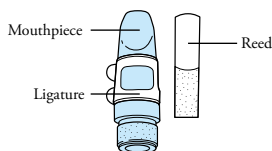


2. Attach the reed to the mouthpiece. First, place the reed so that the tip of the mouthpiece is seen over the end of the reed then tighten the ligature screws to secure the reed.

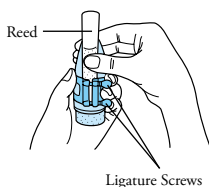 

* After playing, use a piece of gauze to dry the reed, then store the reed in a reed case.

 As the reed and mouthpiece are easily damaged, always keep the mouthpiece covered with its cap when the instrument is not being played.

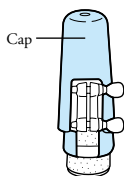


■ Tuning

Since the temperature of the instrument affects its pitch, the instrument should first be warmed up before tuning by blowing air through it.


● A, B♭, & E♭ Clarinets

 Push in or pull out on the barrel to tune the clarinet.

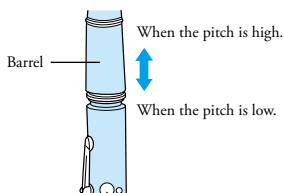


● Alto Clarinet

 Push in or pull out the neck to tune the alto clarinet.

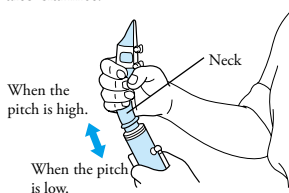

● Bass Clarinet

 
After loosening the fastening screw, push in or pull out the neck to tune the bass clarinet. After tuning is complete, retighten the fastening screw to secure the neck.

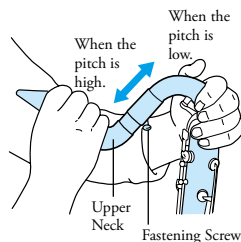



■ Instrument Maintenance After Playing

After playing your clarinet, use the following procedures to remove moisture and dirt from the inside of the instrument.

 - After playing, remove the reed from the mouthpiece and use a piece of gauze, to dry the reed, then store the reed in a reed case.




  - After removing the reed, use the supplied cleaning swab to clean the inside of the mouthpiece.
Also, use the swab to clean the inside of the main body and neck.

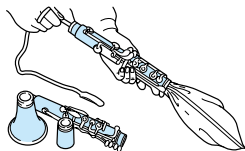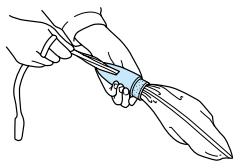


- * To prevent damage to the end of the mouthpiece, do not pull the swab all the way through.
- * Always keep the cleaning swab clean and dry.

 The joint sections especially collect moisture, which can cause cracking, so dry the joints carefully with gauze.

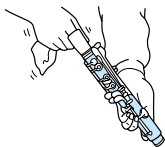

- * Even during playing sessions, remove moisture from the body interior as often as possible.

 
- When the pads are wet, place a cleaning paper (sold separately) between the pad and the tone hole and press the pads lightly to completely remove the moisture.

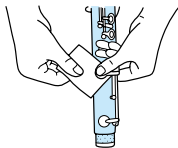

- Use a soft cloth to remove dirt and oil from the body surface, taking care not to damage parts such as the keys.


■ Once or Twice a Month Maintenance

 - Use a tone hole cleaner (sold separately) to remove any dirt from inside the tone holes or the spaces between the keys.

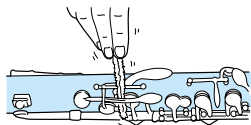

- * Be careful not to bend any parts.
- * Be careful not to damage the pads.

 - Apply a small amount of key oil (sold separately) to the mechanism then move the keys to allow the oil to spread evenly.

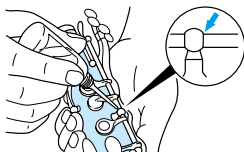

- * Do not apply too much oil.
- * Completely remove any oil on key surfaces.

Troubleshooting

The tone is not clear, or the instrument plays out of tune.

- ▶ If pads are deformed and air is leaking from the instrument, take the instrument to your dealer for repair.
 - Never apply excessive pressure to the keys. Also, when placing the instrument in the case, make sure that nothing is placed on top of the instrument.
- ▶ If the body cracks, take the instrument to your dealer for repair.
 - Sudden changes in temperature or humidity can cause cracking. Do not directly expose the instrument to hot or cold air.

The keys are stiff. The keys do not move.

- ▶ If a spring has become dislodged, returning it to its proper position may correct the problem.
 - When hooking the spring in position, be careful not to bend the spring. Springs may become dislodged when performing maintenance on the instrument or when wiping the instrument with a cloth. Please use caution.
- ▶ If keys are bent, take the instrument to your dealer for repair.
 - Do not apply excessive force to the instrument such as dropping the instrument, closing the case when an object is placed on top of the instrument, etc. Also, when you are finished playing, place the instrument in the case. At this time, make sure that there is nothing in the case that will apply pressure on the keys. When assembling the instrument, be careful not to apply unnecessary pressure to the keys. Hold on to the instrument in the intervals between performance and during breaks between practice.

The joint is too tight or loose.

- ▶ If the joint is tight, apply a small amount of cork grease to the joint cork. If the joint is still tight, apply some cork grease to the receiver side as well.
 - Changes in temperature and/or humidity can cause the cork to shrink or expand which can make the joints tight in the summer and loose in the winter. After you are finished playing, make sure you store the instrument in its case, rather than leave it out.
- ▶ If the joint cork is torn, take the instrument to your dealer for repair.
 - Proper application of cork grease offers some protection against tearing of the cork. However, if the cork becomes torn, take the instrument to your dealer for repair.

The keys are noisy.

- ▶ Apply key oil if the keys lack oil and are dry, and tighten screws that have become loose.
 - Apply key oil once a month (1-2 drops per location) to prevent abrasion. Also, since woodwind instruments have many small screws, check for loose screws and tighten if necessary.
- ▶ The cork or felt on the keys has fallen off or torn. The instrument may have received a shock causing the keys to come in contact with the body or other keys. In this case, take the instrument to your dealer for repair.
 - Take proper care of the instrument to prevent the corks or felts from falling off. After playing the instrument keep the instrument in its case. Also, hold on to the instrument in the intervals between performance and during breaks between practice to prevent excessive pressure being placed on the instrument or keys.



フィンガリングチャート /Fingering Chart/Griff tabelle/Tableau des doigts/

★ このチャートはベーム式です。(アミガけ) はかえ指です。

*1 レジスターキー

*2 アルトクラリネット / バスクラリネットの場合: 左手人差指を下にずらして
キーを押さえ、中央の穴を開けた状態にする。

★ This chart uses the Boehm fingering system. Alternate fingerings are shown on the shaded illustrations.

*1 Register Key

*2 Alto Clarinet/Bass Clarinet: Slide the left fore finger down and hold the key so
that the center hole is open.

★ Die abgebildete Übersicht basiert auf dem Boehm-Griffsystem. Schattierte Instrumente zeigen alternative Griffe.

*1 Registerklappe

*2 Altklarinette/Bassklarinette: Mit dem linken Zeigefinger nach unten fahren
und die Klappe gedrückt halten, so dass das mittlere Loch geöffnet ist.

アルトクラリネット / バスクラリネット
Alto Clarinet/Bass Clarinet
Altklarinette/Bassklarinette
Clarinette Alto/Clarinette Basse

Clarinete alto/Clarinete bajo
中音单簧管 / 低音单簧管
Альттовый кларнет/Бас-кларнет
알토클라리넷 / 베이스클라리넷

YCL-622

● 押さえる
Close
Geschlossen
Fern
Cerrado
关闭
Закрывать
닫기

○ 放す
Open
Offen
Ouvert
Abierto
开启
Открытый
열기

The chart displays fingerings for the following notes: G4, A4, B4, C5, D5, E5, F5, G5. For each note, multiple fingerings are shown, with alternative fingerings shaded. The first five notes are grouped in a blue box. The legend indicates that black dots represent closed keys and white circles represent open keys. A red arrow points to the first note (G4) with the label *1, and another red arrow points to the eighth note (G5) with the label *2.

Gráfico de digitado/ 单簧管指法表 /Диаграмма аппликатуры/ 운지법

★ Ce tableau utilise le doigté système Boehm. Les autres doigtés de remplacement sont indiqués par les illustrations ombrées.

*1 Clé de registre

*2 **Clarinete Alto/Clarinete Basse:** Faites glisser l'index gauche vers le bas et tenez la clé de façon que le trou central soit ouvert.

★ Este gráfico emplea el sistema de digitación Bohem. En las ilustraciones sombreadas se muestran digitaciones alternativas.

*1 Llave de registro

***2 Clarinete alto/Clarinete bajo:** Deslice hacia abajo el dedo índice de la mano izquierda y retenga la llave de modo que el orificio central esté abierto.

★ 本表采用贝姆式指法系统。记录阴影部分表示也可以用此指法。

*1 高音键

*2 中音单簧管/低音单簧管: 向下滑动左手食指, 按住按键, 使中心孔打开。

★ Эта диаграмма показывает систему аппликатуры Бёма. Дополнительная аппликатура показана на затененных иллюстрациях.

***1** Октавный клапан

*2 **Альтовый кларнет/Басовый кларнет:** Двигайте четвертый левый палец вниз, зажимая клавишу так, чтобы центральное отверстие открылось.

★ 이 표에서는 Boehm 윤지 방식을 사용합니다. 다른 윤지법은 어두운 색 그림으로 표시하고 있습니다.

***1 등록 키**

*2 알토클라리넷/ 베이스클라리넷: 짙게 손가락으로 키를 눌러 센터홀이 열리게 합니다.

[illegible]



This document is printed on chlorine free (ECF) paper with soy ink.

Auf Umweltpapier mit Sojatinte gedruckt.

Ce document a été imprimé sur du papier non blanchi au chlore avec de l'encre d'huile de soja.

Este documento se ha impreso en papel sin cloro alguno, con tinta de soja.

この取扱説明書はエコバレルプ（ECF: 無塩素系漂白/バレルプ）を使用しています。

本文件使用无氯（ECF）纸张及油墨印刷。

본 글은 무염소표백지에 소잉크 (soy ink) 로 인쇄되었습니다.

Этот документ отпечатан на бумаге свободной от хлора (ECF) с соевой типографской краской.



この取扱説明書は大豆インクで印刷しています。

2428440 1111POCP-D0

XXXXXXXX

Printed in Japan